


















 

 























Originale	Sostituto
 Power	 Power
 Dimmer	 +  Shift + Mute / Dimmer
 Sleep	 Sleep / Timer
 Speakers A	 Guide / EPG / -/--
 Speakers B	 Fav / Marker / PC
 Optical	 7
 Coaxial	 8
 CD	 3
 Line 1	 1
 Line 2	 2
 Line 3	 4
 Tuner	 6
 Net	 5
 Bluetooth	 9
 Band	 TV/Radio /
 << Tuning	 +  Shift + << /
 << Tuning	 CH- / Page-

Originale	Sostituto
 Tuning >>	 CH+ / Page+
 Tuning >>	 +  Shift + >> /
 Memory	 Smart / List
 < Preset	 I<< / Preset-
 Preset >	 >>I / Preset+
 Clear	 Exit / Cancel / Clear
 Mode	 Sound / Title
 Display	 Display / Media
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Home	 Menu / Home
 Return	 Back / Return
 Setup	 Setup / OPT /
 Vol+	 Vol+





Originale	Sostituto
 Option	 D.Menu / Top
 Now Playing	 Info / Angle
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Repeat	 Green / APP / Repeat
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Shuffle	 Blue / Prime Video / Random
 I<</<<	 << / Tune-
 Stop	 Stop / Hold
 >>/>>I	 >> / Tune+

Originale	Sostituto

