


Originale	Sostituto
 Power	 Power
 Eject	 Eject
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Subtitle	 Subt
 Audio	 Dual
 Angle	 List
 Zoom	 Shift + Eject
 Status	 TV/R
 Setup	 Options
 Miracast	 Media
 Home	 Smart
 1	 1
 2	 2
 3	 3

Originale	Sostituto
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Search	 Shift + TV/R
 Pure Direct	 Format
 CD Mode	 Text
 Top Menu	 Shift + Menu
 Pop-Up Menu	 Menu
 Return	 Back
 On-Screen	 Info
 Up	 Up
 Down	 Down

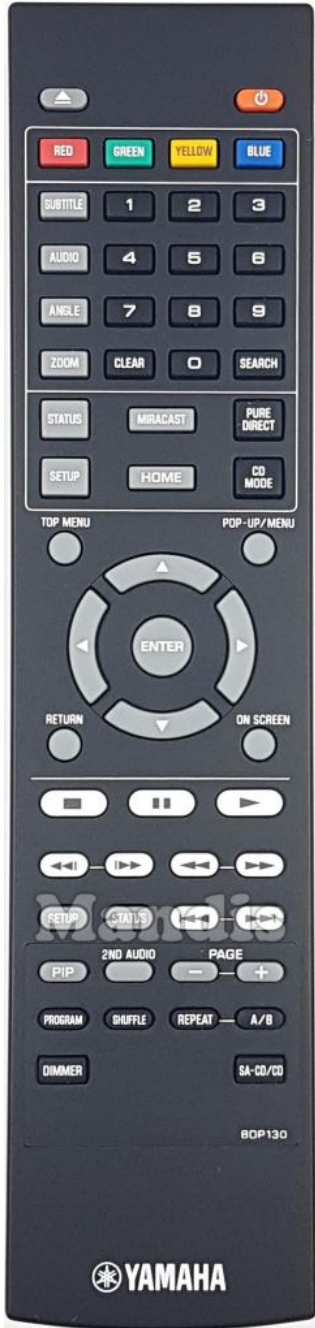



Originale	Sostituto
	Right
	Left
	Ok
	Stop
	Pause
	Play
	+ Shift + Left
	+ Shift + Right
	<<
	>>
	>>
	<<
	3D
	+ Shift + Dual
	Ch +
	Ch -
	Sleep

Originale	Sostituto
	D. Menu
	+ Shift + Text
	Pre Ch
	Guide
	AV

