 
 



 
 
 


 




 





Originale	Sostituto
 Power	 Power
 Standby	 +  Shift + Power
 Multi CH In	 Smart
 Audio Sel	 Media
 Sleep	 Sleep
 Mute	 Mute
 CD	 2
 MD/CD-R	 3
 TUNER	 4
 DVD	 5
 DTV/CBL	 6
 DVR	 7
 V-AUX	 8
 USB	 1
 Scene 1	 Red
 Scene 2	 Green
 Scene 3	 Yellow

Originale	Sostituto
 Scene 4	 Blue
 Level	 D. Menu
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Return	 Back
 Display	 Info
 Volume+	 Vol +
 Volume-	 Vol -
 Prog-	 Ch -
 Prog+	 Ch +
 Enhancer	 +  Shift + 1
 Straight	 +  Shift + 3
 Sur. Decode	 +  Shift + 2








 
 

 
 



 



 
 



 






 
 
 


 

 

 


 
 

 
 




 

 
 


Originale		Sostituto	
	Night		Shift + 5
	Direct ST		Shift + 4

Originale		Sostituto	







 

 

 

 

 
 
 
 
 
 
 

 

 



 


 
 
 
 
 
Originale	Sostituto
 Power AV	 Power
 Mute	 Mute
 Band	 Smart
 Menu	 Menu
 Preset+	 Up
 Preset-	 Down
 A/B/C/D/E+	 Right
 A/B/C/D/E-	 Left
 Enter	 Ok
 Return	 Back
 Display	 Info
 Volume+	 Vol +
 Volume-	 Vol -
 Freq / Text	 Text
 EON	 Media
 PTY SEEK Mode	 Ch -
 PTY SEEK Start	 Ch +

Originale	Sostituto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ENT	 Pre Ch





 



 

 

 

 
 
 


 




 

 





 

 

 
 
 





 



 

 

 
 


 




 


 
 




Originale	Sostituto
 Power AV	 Power
 Mute	 Mute
 Title	 Smart
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Return	 Back
 Display	 Info
 Volume+	 Vol +
 Volume-	 Vol -
 Rec	 Rec
 Stop	 Stop
 Pause	 Pause
 Play	 Play

Originale	Sostituto
 <<	 <<
 >>	 >>
 <<<	 <<<
 >>>	 >>>
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 ENT	 Pre Ch





Originale		Sostituto		Originale		Sostituto	
	Power AV		Power		<<		<<
	Mute		Mute		>>		>>
	Title		Smart		<<		<<
	Menu		Menu		>>		>>
	Up		Up		1		1
	Left		Left		2		2
	Enter		Ok		3		3
	Right		Right		4		4
	Down		Down		5		5
	Return		Back		6		6
	Display		Info		7		7
	Volume+		Vol +		8		8
	Volume-		Vol -		9		9
	Rec		Rec		0		0
	Stop		Stop		+10		Guide
	Pause		Pause		ENT		Pre Ch
	Play		Play				

