

 




 


 

 

 
 
 
 















 

 






 

 
 
 

 
 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 AM	 Media
 Sleep	 Sleep	 < Preset	 Ch -
 Dimmer	 List	 Preset >	 Ch +
 Speakers A	 Red	 Pop-Up Menu	 Menu
 Speakers B	 Green	 Home	 Smart
 Coaxial	 1	 NDW Playing	 Blue
 Optical	 2	 Up	 Up
 Net	 3	 Down	 Down
 Line 1	 4	 Right	 Right
 Line 2	 5	 Left	 Left
 Line 3	 6	 Enter	 Ok
 Mode	 Format	 Setup	 D. Menu
 Tuner	 7	 Return	 Back
 CD	 8	 Volume+	 Vol +
 FM	 TV/R	 Volume-	 Vol -
 << Tuning	 <<	 Mute	 Mute
 Tuning >>	 >>	 Stop	 Stop

Originale	Sostituto	Originale	Sostituto
 MUTE	 SHIFT	 TV	 AUX
 DVD	 SAT	 PLAY MODE	 REC MODE
 SLEEP	 DUAL	 SOUND	 AD
 E-MANUAL	 SUBT	 DISC NAV	 SETTINGS
 D.MENU	 OPT	 LIST	 ECO
 REPEAT	 3D	 PROG	 TIMER
 ZOOM	 AV	 SEARCH	 PICTURE
 TEXT	 UP	 SLEEP	 FORMAT
 TOP MENU	 DISPLAY	 D.MENU	 TEXT
 MENU	 INFO	 HOME	 SMART
EXIT	BACK	APP	MEDIA
VOL +	CH +	RETURN	BACK
VOL -	CH -	ENTER	OK
1	2	SETUP	E-MANUAL
2	3	RETURN	D.MENU
3	4	RETURN	BACK
4	5	VOL +	VOL +
5	6	VOL -	VOL -
6	7	MUTE	MUTE
7	8	STOP	STOP
8	9	GUIDE	PRE-CH
9	0	A	B
0	FAV	C	D
FAV	PRE-CH		



