 
 




| Originale   | Sostituto   |
|---|---|
|  Power         |  Power                   |
|  Open/Close    |  Eject / Surround        |
|  Enter         |  OK                      |
|  Up            |  Up                      |
|  Down          |  Down                    |
|  Right         |  Right                   |
|  Left          |  Left                    |
|  Audio         |  Audio / Lang I/II       |
|  Subtitle      |  Subtitle / EQ           |
|  PIP          |  Zoom / Size            |
|  Top Menu    |  D.Menu / Top          |
|  Pop-Up/Menu |  Menu / Home           |
|  Return      |  Back / Return         |
|  Home        |  Shift + Home / Menu / |
|  Miracast    |  Smart / List          |
|  On Screen   |  Display / Media       |
|  Status      |  Setup / OPT /         |

| Originale  | Sostituto   |
|--|---|
|  Clear            |  Exit / Cancel / Clear         |
|  2nd Audio        |  Mute / Dimmer                 |
|  Stop             |  Stop / Hold                   |
|  Search           |  Shift + Netflix / Search /    |
|  Pause            |  Pause / Step / Freeze         |
|  Play             |  Play / Slow                   |
|  <<               |  << / Tune-                    |
|  >>               |  >> / Tune+                    |
|  I<<              |  I<< / Preset-                 |
|  >>I             |  >>I / Preset+                |
|  Green/Program  |  Green / APP / Repeat        |
|  Red/Zoom       |  Red / Netflix / Search      |
|  Yellow/Shuffle |  Yellow / YouTube / Repeat   |
|  Blue/Repeat    |  Blue / Prime Video / Random |
|  1              |  1                           |
|  2              |  2                           |
|  3              |  3                           |



