







Originale	Sostituto
Power	Power
Standby	Shift + Power
CD	Shift + 3
MD/CD-R	Shift + 5
DVD	Shift + 2
DTV/CBL	Shift + 1
Tuner	Shift + 6
Multi CH In	Shift + 8
V-AUX	Shift + 7
DVR	Shift + 9
VCR	Shift + 4
PHONO	Shift + 0
Sleep	Sleep / Timer
Volume +	Vol+
Volume -	Vol-
Mute	Mute / Dimmer
Stereo	1

Originale	Sostituto
Music	2
Entertain	3
Movie	4
Standard	5
Select	6
Exto Sur.	7
Pure Direct	8
Speakers	9
Enhancer	0
Night	Guide / EPG / -/-
Straight	Fav / Marker / PC
Level / Title	Sound / Title
Set Menu	Menu / Home
Up	Up
Left/-	Left
Enter	OK
Right/+	Right





Originale	Sostituto	Originale	Sostituto
	Down		Down
	Return		Back / Return
	On Screen /		Display / Media





 
Originale	Sostituto
Power	Power
Standby	+  Shift + Power
CD	+  Shift + 3
MD/CD-R	+  Shift + 5
DVD	+  Shift + 2
DTV/CBL	+  Shift + 1
Tuner	+  Shift + 6
Multi CH In	+  Shift + 8
V-AUX	+  Shift + 7
DVR	+  Shift + 9
VCR	+  Shift + 4
PHONO	+  Shift + 0
Sleep	Sleep / Timer
Volume +	Vol+
Volume -	Vol-
Mute	Mute / Dimmer
1	1

Originale	Sostituto
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
ENT	Fav / Marker / PC
Title/Level	Sound / Title
Up / Preset+	Up
Up / Preset+	>>  / Preset+
Menu/Set Menu	Menu / Home
Left / A/B/C/D/E-	Left
Enter	OK
Right /	Right



A/B/C/D/E+



Originale	Sostituto
 Return	 Back / Return
 Down / Preset-	 Down
 Down / Preset-	 I<< / Preset-
 Display	 Display / Media
 Freq/Text	 Red / Netflix / Search
 PTY Seek Mode	 Yellow / YouTube / Repeat
 PTY Seek Start	 Blue / Prime Video / Random
 EON	 Green / APP / Repeat

Originale	Sostituto

