



 






 
















Originale	Sostituto
 Open/Close	 Eject / Surround
 Power	 Power
 Red/Program	 Red / Netflix / Search
 Green/Marker	 Green / APP / Repeat
 Yellow/Digest	 Yellow / YouTube / Repeat
 Blue/Zoom	 Blue / Prime Video / Random
 Shuffle	 TV/Radio /
 Repeat	 Shift + Green / APP /
 A/B	 Shift + Yellow / YouTube /
 PIP	 Zoom / Size
 <<	 << / Tune-
 >>	 >> / Tune+
 2nd Audio	 Sound / Title
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze

Originale	Sostituto
 Play	 Play / Slow
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Top Menu	 D.Menu / Top
 Down	 Down
 Pop-Up Menu	 Menu / Home
 Return	 Back / Return
 On Screen	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7



