



 

 





























Originale	Sostituto
 Eco	 D.Menu / Top
 Power	 Power
 Surround	 Eject / Surround
 Stereo	 Audio / Lang I/II
 Target	 Menu / Home
 Beam	 Smart / List
 HDMI 1	 1
 HDMI 2	 2
 HDMI 3	 3
 TV	 4
 Optical	 5
 Bluetooth	 9
 AUX 1	 7
 AUX2	 8
 Clear Voice	 Exit / Cancel / Clear
 System Memory	 Guide / EPG / -/--
 System Memory	 0

Originale	Sostituto
 System Memory	 Fav / Marker / PC
 Sub+	 CH+ / Page+
 CH Level	 Display / Media
 Vol+	 Vol+
 Sub-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Setup	 Setup / OPT /
 Up	 Up
 Option	 Shift + Setup / OPT / Tools
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Info	 Info / Angle
 Movie	 Red / Netflix / Search





	Originale	Sostituto		Originale	Sostituto
	Music	Green / APP / Repeat			
	Entertainment	Yellow / YouTube / Repeat			
	Off	Blue / Prime Video / Random			
	Enhancer	Text / Goto			
	Univolume	AV / Input / RDS			
	Bluetooth	Picture / Format			
	Subwoofer Pairing	Zoom / Size			
	Repeater	Shift + Green / APP /			

