





 



 





 





















Originale	Sostituto
 Power	 Power
 Standby	 Shift + Power
 Sleep	 Sleep / Timer
 CD	 Shift + 3
 MD/CD-R	 Shift + 5
 DVD	 Shift + 2
 D-TV/CBL	 Shift + 1
 TUNER	 Shift + 6
 Multi CH In	 Shift + 0
 V-AUX / Dock	 Shift + 7
 DVR	 Shift + 4
 NET	 Shift + 9
 USB	 Shift + 8
 Volume +	 Vol+
 Volume -	 Vol-
 Mute	 Mute / Dimmer
 Stereo	 1

Originale	Sostituto
 Music	 2
 Entertain	 3
 Movie	 4
 Standard	 5
 Select	 6
 Extd Sur.	 7
 Direct ST	 8
 Speakers	 9
 Enhancer	 Guide / EPG / -/-
 Night	 0
 Straight	 Fav / Marker / PC
 Level	 Sound / Title
 Up / Preset/CH +	 Up
 Set Menu	 Menu / Home
 Left/-	 Left
 Enter	 OK
 Right/+	 Right







Originale	Sostituto
Power	Power
Standby	+  Shift + Power
Sleep	Sleep / Timer
CD	+  Shift + 3
MD/CD-R	+  Shift + 5
DVD	+  Shift + 2
DTV/CBL	+  Shift + 1
Tuner	+  Shift + 6
Multi CH In	+  Shift + 0
V-AUX / Dock	+  Shift + 7
DVR	+  Shift + 4
USB	+  Shift + 8
NET	+  Shift + 9
Volume +	Vol+
Volume -	Vol-
Mute	Mute / Dimmer
1	1

Originale	Sostituto
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
ENT	Fav / Marker / PC
Band	Sound / Title
Up / Preset+	Up
Up / Preset+	>>  / Preset+
Srch Mode	Menu / Home
Left / A/B/C/D/E-	Left
Enter	OK
Right /	Right



A/B/C/D/E+

