



Originale	Sostituto
Power	Power
Standby	+ Shift + Power
Sleep	Sleep / Timer
CD	+ 3 Shift + 3
MD/CD-R	+ 5 Shift + 5
DVD	+ 2 Shift + 2
D-TV/CBL	+ 1 Shift + 1
TUNER	+ 6 Shift + 6
Multi CH In	+ 0 Shift + 0
V-AUX	+ 7 Shift + 7
DVR	+ 4 Shift + 4
Volume +	Vol+
Volume -	Vol-
Mute	Mute / Dimmer
Stereo	1
Music	2
Entertain	3

Originale	Sostituto
Movie	4
Standard	5
Select	6
Extd Sur.	7
Direct ST	8
Speakers	9
Enhancer	Guide / EPG / -/-
Night	0
Straight	Fav / Marker / PC
Level	Sound / Title
Up / Preset/CH +	Up
Set Menu	Menu / Home
Left/-	Left
Enter	OK
Right/+	Right
Return	Back / Return
Down / Preset/CH	Down





Originale	Sostituto
Power	Power
Standby	+ Shift + Power
Sleep	Sleep / Timer
CD	+ 3 Shift + 3
MD/CD-R	+ 5 Shift + 5
DVD	+ 2 Shift + 2
DTV/CBL	+ 1 Shift + 1
Tuner	+ 6 Shift + 6
Multi CH In	+ 0 Shift + 0
V-AUX / Dock	+ 7 Shift + 7
DVR	+ 4 Shift + 4
Volume +	Vol+
Volume -	Vol-
Mute	Mute / Dimmer
1	1
2	2
3	3

Originale	Sostituto
4	4
5	5
6	6
7	7
8	8
9	9
0	0
ENT	Fav / Marker / PC
Band	Sound / Title
Preset+	Up
Preset+	>> / Preset+
Srch Mode	Menu / Home
Left / A/B/C/D/E-	Left
Enter	OK
Right /	Right
Return	Back / Return
Preset-	Down



