



| Originale  | Sostituto                   | Originale   | Sostituto             |
|------------|-----------------------------|-------------|-----------------------|
| Standby/On | Power                       | Enter       | OK                    |
| Movie      | Red / Netflix / Search      | Right/A>E   | Right                 |
| Music      | Green / APP / Repeat        | Down/-      | Down                  |
| Sports     | Yellow / YouTube / Repeat   | Preset/Tune | D.Menu / Top          |
| Game       | Blue / Prime Video / Random | Auto/Man'L  | Subtitle / EQ         |
| Input 1    | 1                           | Memory      | Rec / Rec Mode        |
| Input 2    | 2                           | SW+         | 7                     |
| Input 3    | 3                           | Test        | Text / Goto           |
| Volume+    | Vol+                        | Position    | Setup / OPT /         |
| Input 4    | 4                           | Area        | TV/Radio /            |
| FM         | 5                           | SW-         | Guide / EPG / -/-     |
| Dock       | 6                           | Stop        | Stop / Hold           |
| Volume-    | Vol-                        | Pause       | Pause / Step / Freeze |
| Stereo     | Sound / Title               | Play        | Play / Slow           |
| Up/+       | Up                          | Center+     | 8                     |
| Mute       | Mute / Dimmer               | <<          | << / Tune-            |
| Left/A<E   | Left                        | >>          | >> / Tune+            |



