



| Originale | Sostituto |
|-------------|-------------------|
| Sleep | Sleep / Timer |
| Power | Power |
| Scene 1 | 1 |
| Scene 2 | 2 |
| Scene 3 | 3 |
| Scene 4 | 4 |
| Straight | Audio / Lang I/II |
| Pure Direct | Subtitle / EQ |
| Enhancer | Text / Goto |
| Sur.Decode | Picture / Format |
| < Program | CH- / Page- |
| Program > | CH+ / Page+ |
| Input Up | Shift + Up |
| Tuner | 6 |
| Volume+ | Vol+ |
| USB | 8 |
| Input Down | Shift + Down |

| Originale | Sostituto |
|-------------|-----------------------------|
| NET | Fav / Marker / PC |
| Volume- | Vol- |
| Bluetooth | 9 |
| Mute | Mute / Dimmer |
| Setup | Setup / OPT / |
| Up | Up |
| Option | Shift + Setup / OPT / Tools |
| Left | Left |
| Enter | OK |
| Right | Right |
| Return | Back / Return |
| Down | Down |
| Display | Display / Media |
| Top Menu | D.Menu / Top |
| Home | Menu / Home |
| Pop-Up/Menu | Shift + Menu / |
| Red | Red / Netflix / Search |



 









 
 









 














| Originale | Sostituto |
|-------------|-----------------------------|
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| I<< | I<< / Preset- |
| Play/Memory | Play / Slow |
| >>I | >>I / Preset+ |
| << Tuning | << / Tune- |
| Stop/Mode | Stop / Hold |
| Pause/Band | Pause / Step / Freeze |
| Tuning >> | >> / Tune+ |
| < Preset | Shift + I<< / Preset- |
| Preset > | Shift + >>I / Preset+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Originale | Sostituto |
|-----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Originale | Sostituto |
|--|---|
|  Sleep |  Sleep / Timer |
|  Power |  Power |
|  Scene 1 |  1 |
|  Scene 2 |  2 |
|  Scene 3 |  3 |
|  Scene 4 |  4 |
|  Input Up |  Shift + Up |
|  Tuner |  6 |
|  Volume+ |  Vol+ |
|  USB |  8 |
|  Input Down |  Shift + Down |
|  NET |  Fav / Marker / PC |
|  Volume- |  Vol- |
|  Bluetooth |  9 |
|  Mute |  Mute / Dimmer |
|  Up |  Up |
|  Left |  Left |

| Originale | Sostituto |
|---|---|
|  Enter |  OK |
|  Right |  Right |
|  Return |  Back / Return |
|  Down |  Down |
|  Display |  Display / Media |
|  Top Menu |  D.Menu / Top |
|  Home |  Menu / Home |
|  Pop-Up/Menu |  Shift + Menu / |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  I<< |  I<< / Preset- |
|  Play/Memory |  Play / Slow |
|  >>I |  >>I / Preset+ |
|  << Tuning |  << / Tune- |
|  Stop/Mode |  Stop / Hold |





| Originale | Sostituto |
|------------|--------------------------|
| Pause/Band | Pause / Step / Freeze |
| Tuning >> | >> / Tune+ |
| < Preset | + Shift + << / Preset- |
| Preset > | + Shift + >> / Preset+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Originale | Sostituto |
|-----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

