



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
---	Shift + Guide / EPG / ---
Recall	Back / Return
Sleep	Sleep / Timer
Audio	Audio / Lang I/II
Aspect	Shift + Picture / Format

Originale	Sostituto
Input	AV / Input / RDS
Info	Info / Angle
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Up	Up
Down	Down
Right	Right
Left	Left
OK	OK
Vol+	Vol+
Vol-	Vol-
FAV	Fav / Marker / PC
P.Mode	Picture / Format
S.Mode	Sound / Title
CH+	CH+ / Page+
CH-	CH- / Page-
Red	Red / Netflix / Search



