







 














 




 

 

 

 

 



 

 

 







Originale	Sostituto	Originale	Sostituto
Power	Power	Subtitle	Subtitle / EQ
Eject	Eject / Surround	Zoom/Size	Zoom / Size
Tv/Radio	TV/Radio /	Aspect	Shift + Picture / Format
Red/Goto	Red / Netflix / Search	Subpage	Shift + Subtitle / EQ
Red/Goto	Shift + Text /	Media	Shift + Display / Media
Green/Angle	Info / Angle	Play	Play / Slow
Green/Angle	Green / APP / Repeat	Pause	Pause / Step / Freeze
Yellow/Repeat	Shift + Green / APP /	<< / Tune-	
Yellow/Repeat	Yellow / YouTube / Repeat	>> / Tune+	
Blue/A-B	Shift + Blue / Prime	Rec	Rec / Rec Mode
Blue/A-B	Blue / Prime Video / Random	D.Setup	Setup / OPT /
FAV	Fav / Marker / PC	Stop	Stop / Hold
Text	Text / Goto	I<<	I<< / Preset-
Freeze/Hold	Shift + Stop /	>>I/Index	>>I / Preset+
Freeze/Hold	Shift + Pause / Step /	>>I/Index	Smart / List
EPG	Guide / EPG / -/--	Menu	Menu / Home
D.Menu	D.Menu / Top	Lang/Audio	Audio / Lang I/II

Originale	Sostituto	Originale	Sostituto
Subtitle	Subtitle / EQ	Subtitle	Subtitle / EQ
Zoom/Size	Zoom / Size	Zoom/Size	Zoom / Size
Aspect	Shift + Picture / Format	Aspect	Shift + Picture / Format
Subpage	Shift + Subtitle / EQ	Subpage	Shift + Subtitle / EQ
Media	Shift + Display / Media	Media	Shift + Display / Media
Play	Play / Slow	Play	Play / Slow
Pause	Pause / Step / Freeze	Pause	Pause / Step / Freeze
<< / Tune-	<< / Tune-	<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+	>> / Tune+	>> / Tune+
Rec	Rec / Rec Mode	Rec	Rec / Rec Mode
D.Setup	Setup / OPT /	D.Setup	Setup / OPT /
Stop	Stop / Hold	Stop	Stop / Hold
I<<	I<< / Preset-	I<<	I<< / Preset-
>>I/Index	>>I / Preset+	>>I/Index	>>I / Preset+
>>I/Index	Smart / List	>>I/Index	Smart / List
Menu	Menu / Home	Menu	Menu / Home
Lang/Audio	Audio / Lang I/II	Lang/Audio	Audio / Lang I/II





Originale	Sostituto
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down
 Title/Exit	 Shift + Sound / Title
 Title/Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3

Originale	Sostituto
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title

