




 

 



 



 

 

 

 

 

 
 

 









Originale	Sostituto
 Power	 Power
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info
 Recall	 Pre Ch
 Prime Video	 Shift + Smart
 Home	 Smart
 Q.Menu	 D. Menu

Originale	Sostituto
 YouTube	 Shift + Media
 Menu	 Menu
 Up	 Up
 Netflix	 Media
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Exit	 Exit
 Vol+	 Vol +
 Back	 Back
 Vol-	 Vol -
 Guide	 Guide
 Mute	 Mute
 Ch+	 Ch +
 Ch-	 Ch -
 Red	 Red





Originale	Sostituto
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Index / Play/Pause	 +  Shift + Info
 Index / Play/Pause	 Play
 Index / Play/Pause	 Pause
 Hold / Stop	 Stop
 Mix	 +  Shift + Text
 Text / I<<	 Text
 Text / I<<	 I<<
 Size / >>I	 Eject
 Size / >>I	 >>I
 Audio Lang I/II	 Dual
 Reveal / <<	 <<
 Cancel / >>	 >>
 Subtitle	 Subt

Originale	Sostituto

