
 
 




 
 




 
 













 










| Originale | Sostituto |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
|  |  Power |
|  |  Mute / Dimmer |
|  |  Shift + Audio / Lang I/II |
|  |  Shift + Picture / Format |
|  |  Picture / Format |
|  |  Sound / Title |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  7 |
|  |  8 |
|  |  9 |
|  |  Shift + Guide / EPG / -/- |
|  |  0 |

| Originale | Sostituto |
|---------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
|  |  Back / Return |
|  |  Display / Media |
|  |  Pause / Step / Freeze |
|  |  Rec / Rec Mode |
|  |  Red / Netflix / Search |
|  |  Green / APP / Repeat |
|  |  Yellow / YouTube / Repeat |
|  |  Blue / Prime Video / Random |
|  |  Sleep / Timer |
|  |  Up |
|  |  AV / Input / RDS |
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Down |
|  |  Menu / Home |
|  |  Exit / Cancel / Clear |



