 

 



 

 

 

 

 

 

 

 

 
 

 


 









Originale	Sostituto
 Standby	 Power
 Auto	 Smart / List
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Aspect	 Shift + Picture / Format

Originale	Sostituto
 Audio	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 FAV	 Fav / Marker / PC





Originale	Sostituto
FAV-	FAV-  +  Shift + CH- /
FAV+	FAV+  +  Shift + CH+ /
EPG	 Guide / EPG / -/--
TEXT	 Text / Goto
HOLD	 +  Shift + Stop /
TV/RADIO	 TV/Radio /
SUBTITLE	 Subtitle / EQ
INDEX	 Info / Angle
SIZE	 Zoom / Size
REVEAL	 Setup / OPT /
SUBPAGE	 Eject / Surround
MEDIA	 +  Shift + Display / Media
	 Play / Slow
	 Pause / Step / Freeze
	 << / Tune-
	 >> / Tune+
	 Rec / Rec Mode

Originale	Sostituto
	 Stop / Hold
	 I<< / Preset-
	 >>I / Preset+
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random

