




 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Recall		Back
	Mute		Mute		Sleep		Sleep
	Input		AV		Menu		Menu
	Aspect		Format		Tv/Radio		TV/R
	Nicam		3D		Display		Info
	P.Mode		Shift + Format		Exit		Exit
	S.Mode		Shift + Dual		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		CH+		Ch +
	6		6		CH-		Ch -
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		FAV		Pre Ch
	0		0		FAV+		Shift + Ch +





Originale	Sostituto
 FAV-	 Shift + Ch -
 EPG	 Guide
 Text	 Text
 Hold	 Options
 Lang	 Dual
 Subtitle	 Subt
 Index/<<	 <<
 Size/>>	 >>
 Reveal/l<<<	 l<<<
 Subpage/>>>l	 >>>l
 Rec	 Rec
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Media	 Media
 Red	 Red
 Green	 Green

Originale	Sostituto
 Yellow	 Yellow
 Blue	 Blue

