 
 



 

 
 

 
 
 






 
 
 
 
 



 







Originale		Sostituto		Originale		Sostituto	
	Standby		Power		NICAM		Shift + Audio / Lang I/II
	Open/Close /		Eject / Surround		CH +		CH+ / Page+
	MUTE		Mute / Dimmer		VOL -		Vol-
	1		1		DISPLAY		Display / Media
	2		2		CH -		CH- / Page-
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK		OK
	6		6		Right		Right
	7		7		LCD MENU		Shift + Menu /
	8		8		Down		Down
	9		9		EXIT		Exit / Cancel / Clear
	0		Shift + Guide / EPG / -/--		INPUT		AV / Input / RDS
	0		0		P.MODE		Picture / Format
	RECALL		Back / Return		S.MODE		Sound / Title
	VOL +		Vol+		SLEEP		Sleep / Timer
	ASPECT		Shift + Picture / Format		FAV		Fav / Marker / PC





Originale	Sostituto
 FAV -	 Shift + CH- /
 FAV +	 Shift + CH+ /
 EPG	 Guide / EPG / -/--
 TEXT	 Text / Goto
 HOLD	 Shift + Stop /
 Subtitle	 Subtitle / EQ
 TV/RADIO	 TV/Radio /
 INDEX / D.DISP	 Menu / Home
 SIZE / ZOOM	 Zoom / Size
 REVEAL/ANGLE	 Info / Angle
 TITLE / Subpage	 Shift + Sound / Title
 D.MENU	 D.Menu / Top
 Audio	 Audio / Lang I/II
 Goto	 Shift + Text /
 Setup	 Setup / OPT /
 MEDIA	 Shift + Display / Media
 PLAY/PAUSE	 Play / Slow

Originale	Sostituto
 PLAY/PAUSE	 Shift + Play /
 <<	 << / Tune-
 >>	 >> / Tune+
 REC	 Rec / Rec Mode
 STOP	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 RED / Prog	 Red / Netflix / Search
 GREEN / Intro	 Green / APP / Repeat
 YELLOW /	 Yellow / YouTube / Repeat
 YELLOW /	 Shift + Yellow / YouTube /
 BLUE / A-B	 Blue / Prime Video / Random

