

























 










Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/0	 Shift + Guide / EPG / -/0
 0	 0
 Recall	 Back / Return
 Vol +	 Vol+
 Aspect	 Shift + Picture / Format
 Nicam	 Audio / Lang I/II

Originale	Sostituto
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Input	 AV / Input / RDS
 CH -	 CH- / Page-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 PMode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 FAV	 Fav / Marker / PC
 FAV -	 Shift + Down





Originale	Sostituto
FAV+	FAV +
EPG	EPG
TEXT	Text
HOLD	Hold
LANG	Lang
SUBTITLE	Subtitle
INDEX / <<	Index / <<
INDEX / <<	Index / <<
SIZE / >>	Size / >>
SIZE / >>	Size / >>
REVEAL / I<<	Reveal / I<<
SUBPAGE / >>I	Subpage / >>I
SUBPAGE / >>I	Subpage / >>I
Rec	Rec
Play / Pause	Play / Pause
Play / Pause	Play / Pause
Stop	Stop

Originale	Sostituto
MEDIA	Media
TV/RADIO	Red / TV/Radio
TV/RADIO	Red / TV/Radio
Green	Green
Yellow	Yellow
Blue	Blue

