 
 

 


 

 





 

 

 

 

 



 

 

 

 






Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Exit	 Exit
 Text	 Text
 Audio I/II	 Dual
 Display	 Info
 Sleep	 Sleep
 P+	 Ch +
 P-	 Ch -
 V+	 Vol +
 V-	 Vol -
 Red / Source	 AV
 Red / Source	 Shift + Red
 Green / TV	 Menu
 Green / TV	 Shift + Green
 Yellow / PMode	 Format
 Yellow / PMode	 Shift + Yellow

Originale	Sostituto
 Blue / SMode	 Shift + Dual
 Blue / SMode	 Shift + Blue
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Originale		Sostituto		Originale		Sostituto	
	-/--	+	Shift + Guide		Stop / FAV -	+	Shift + Left
	Recall		Back		<< / FAV		<<
	Red		Red		<< / FAV		Pre Ch
	Green		Green		>> / FAV+		>>
	Yellow		Yellow		>> / FAV+	+	Shift + Right
	Blue / Repeat		Blue		EPG		Guide
	Blue / Repeat	+	Shift + Text		USB/SD		Media
	Subtitle		Subt		Recorder		Rec
	Pause/Play / Hold		Play		CH.List		List
	Pause/Play / Hold		Pause		TV / Radio		TV/R
	Size		3D				
	Mix		D. Menu				
	Reveal	+	Shift + Info				
	TXT Index		Eject				
	I<< / Subpage		I<<				
	>>I / Lang		>>I				
	Stop / FAV -		Stop				

