





 
 

 



 

 







 

 




 
 

 


 







 
 


 






 


 
 
 


 








Originale	Sostituto	Originale	Sostituto
 Power	 Power	 TShift	 Eject
 Mute	 Mute	 Freeze	 3D
 DTV	 Media	 Rec	 Rec
 Rec List	 List	 Red	 Red
 TXT	 Text	 Green	 Green
 Sleep	 Sleep	 Yellow	 Yellow
 1	 1	 Blue	 Blue
 2	 2	 Info	 Info
 3	 3	 Source	 AV
 4	 4	 Up	 Up
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 Menu	 Menu
 0	 0	 Exit	 Exit
 Back	 Back	 Vol+	 Vol +





Originale	Sostituto
VOL ▼	VOL -
GUIDE	-/-- GUIDE
FAV	FAV PRE-CH
▲ CH	+ CH
▼ CH	- CH
▶ HOLD	▶ PLAY MODE
▶ HOLD	 Pause
◀◀ REVEAL	◀◀
▶▶ SIZE	▶▶
■ INDEX	E-MANUAL D.MENU
■ INDEX	■ Stop
I◀◀	I◀◀
▶▶I S.PAGE	▶▶I
■ FORMAT	PICTURE FORMAT
■ AUDIO	SOUND DUAL
■ SUBT	AD SUBT
■ TVRADIO	SEARCH TV/R

Originale	Sostituto
-/--	SHIFT + -/-- Guide
P.MODE	SHIFT + PICTURE FORMAT
S.MODE	SHIFT + SOUND DUAL

