


 

 





 



 

 





 







 
 









Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info
 Guide	 Guide
 Netflix	 Media
 YouTube	 Shift + Smart
 Google Play	 TV/R

Originale	Sostituto
 Prime Video	 Shift + Media
 Home	 Smart
 Menu	 Menu
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Aspect	 Format
 Source	 AV
 CH+	 Ch +
 CH-	 Ch -
 Red	 Red





Originale		Sostituto		Originale		Sostituto	
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<<		<<				
	Play		Play				
	>>		>>				
	Rec		Rec				
	Pause		Pause				
	Stop		Stop				
	Text		Text				
	Subt		Subt				
	Audio		Dual				

