






 
 




 




 



 







Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Picture	 Shift + Format
 Aspect	 Format
 Sleep	 Sleep
 Sound	 Shift + Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Shift + Pre Ch

Originale	Sostituto
 Recall	 Pre Ch
 Display	 Info
 Input	 AV
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Vol+	 Vol +
 Vol-	 Vol -
 EPG	 Guide
 Tv/Radio	 TV/R
 CH+	 Ch +
 CH-	 Ch -
 Subtitle	 Subt





Originale	Sostituto
 CH List	 List
 TV/TXT	 Text
 Cancel	 Options
 Reveal	 Media
 Nicam/A2	 Dual
 Index	 I<<
 Hold	 >>I
 Size	 Eject
 Subpage	 Shift + Subt
 <<	 <<
 >>	 >>
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Originale	Sostituto
 Blue	 Blue

