


 




 









 

 
 

 
 
 

 

 










Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV / Radio	 TV/Radio /
 0	 0
 Recall / Mouse	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Nicam / A2	 Audio / Lang I/II

Originale	Sostituto
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 CH +	 CH+ / Page+
 Vol +	 Vol+
 Info	 Info / Angle
 CH -	 CH- / Page-
 Vol -	 Vol-
 Home	 Shift + Menu /
 FAV	 Fav / Marker / PC
 Settings	 Setup / OPT /
 ASP	 Smart / List
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 I<< / Text	 Text / Goto
 I<< / Text	 I<< / Preset-
 >>I / Subpage	 >>I / Preset+
 << / Size	 << / Tune-
 >> / Reveal	 >> / Tune+
 Play/Pause / Index	 Play / Slow
 Stop / Hold	 Stop / Hold
 Cancel	 Shift + Exit / Cancel / Clear
 Subtitle	 Subtitle / EQ
 Repeat	 Shift + Green / APP /
 Freeze	 Pause / Step / Freeze
 A - B	 Shift + Yellow / YouTube /
 Media	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Originale	Sostituto
 Blue	 Blue / Prime Video / Random

