








 








 





















































Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Sub	 Subtitle / EQ
 TXT	 Text / Goto
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 i	 Info / Angle
 MENU	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down

Originale	Sostituto
 EPG	 Guide / EPG / -/--
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Vol-	 Vol-
 Fav	 Fav / Marker / PC
 List	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Originale		Sostituto		Originale		Sostituto	
0	0	HDMI - BAT 0	0				

