Mandis shop

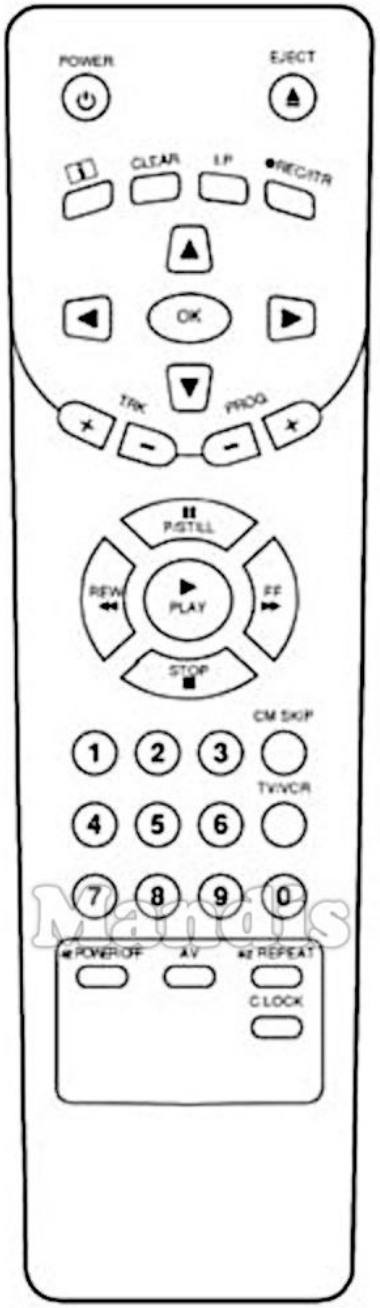

Originale		Sostituto	
POWER	Power		Power
EJECT	Eject	SURROUND	Eject / Surround
i	i	ANGLE INFO	Info / Angle
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
LP	LP	HOME MENU	Menu / Home
REC/ITR	Rec / ITR	REC MODE	Rec / Rec Mode
	Up		Up
	Left		Left
OK	OK	OK	OK
	Right		Right
	Down		Down
P/STILL	P/Still	STEP - FREEZE	Pause / Step / Freeze
REW	Rew	TUNE-	<< / Tune-
PLAY	Play	SLOW	Play / Slow
FF	FF	TUNE+	>> / Tune+
STOP	Stop	HOLD	Stop / Hold
1	1	TV 1	1

Originale		Sostituto	
2	2	DVD 2	2
3	3	CD - STB 3	3
CM SKIP	CM Skip	MEDIA DISPLAY	Display / Media
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
TV/VCR	TV / VCR	LIST SMART	Smart / List
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0
POWER OFF	ez Power Off	DIMMER MUTE	Mute / Dimmer
AV	AV	RDS AV INPUT	AV / Input / RDS
ez REPEAT	ez Repeat	APP REPEAT	Green / APP / Repeat
C.LOCK	C. Lock	TOP MENU D.MENU	D.Menu / Top

https://tutti-i-telecomandi.it/it/Bluesky/1066163-96251-telecomando-di-sostituzione-per-Bluesky-XR20N.html