Mandis shop

B12625

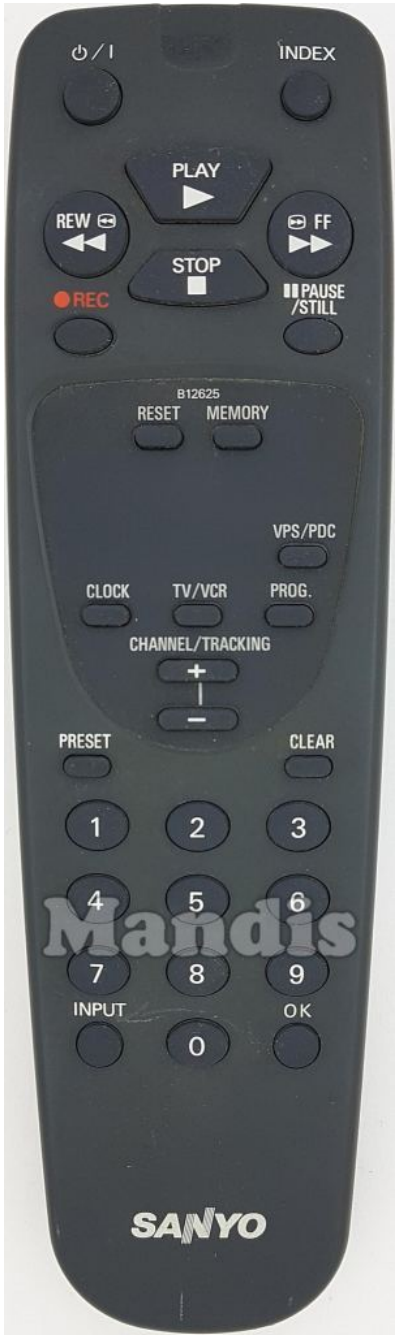

Originale		Sostituto	
⏻/I	Power	⏻	Power
INDEX	Index	ANGLE INFO	Info / Angle
REW	<<</REW	TUNE-	<< / Tune-
PLAY	Play	SLOW	Play / Slow
FF	>>/FF	TUNE+	>> / Tune+
STOP	Stop	HOLD	Stop / Hold
PAUSE /STILL	Pause/Still	STEP - FREEZE	Pause / Step / Freeze
REC	Rec	REC MODE	Rec / Rec Mode
RESET	Reset	NETFLIX SEARCH	Red / Netflix / Search
MEMORY	Memory	APP REPEAT	Green / APP / Repeat
VPS/PDC	VPS/PDC	LIST SMART	Smart / List
CLOCK	Clock	TIMER SLEEP	Sleep / Timer
TV/VCR	TV/VCR	MEDIA DISPLAY	Display / Media
PROG.	Prog.	PROGRAM TV/ RADIO	TV/Radio /
CHANNEL/TRACKING +	Channel/Tracking	+ CH PAGE	CH+ / Page+
CHANNEL/TRACKING −	Channel/Tracking-	CH PAGE −	CH- / Page-
PRESET	Preset	HOME MENU	Menu / Home

Originale		Sostituto	
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
INPUT	Input	RDS AV INPUT	AV / Input / RDS
0	0	HDMI - SAT 0	0
OK	OK	OK	OK

https://tutti-i-telecomandi.it/it/Sanyo/1066706-91213-telecomando-di-sostituzione-per-Sanyo-B12625.html