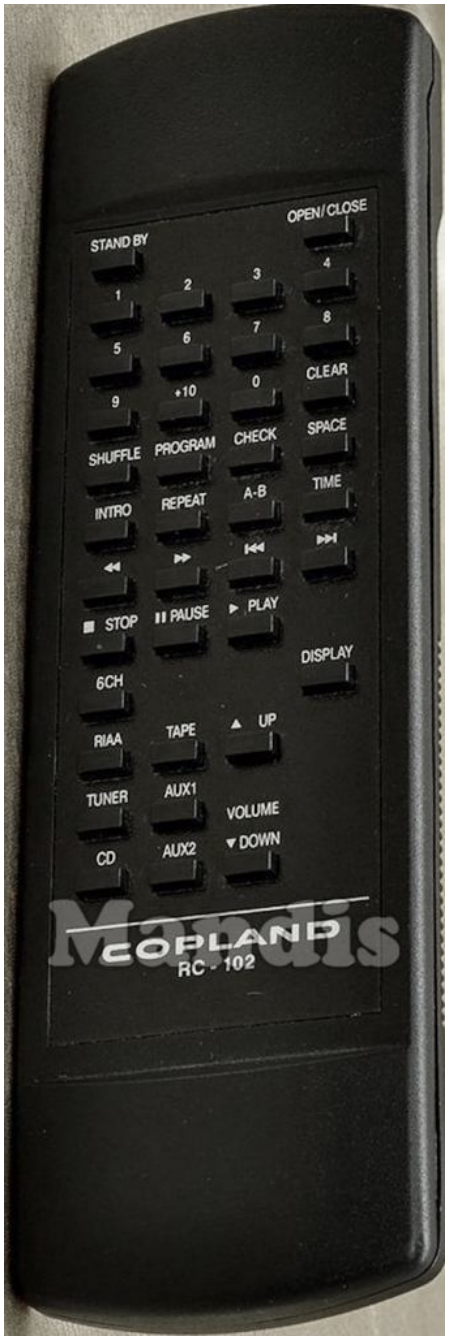

Originale		Sostituto	
STAND BY	Stand By		Power
PLAY	PLAY	SLOW	Play / Slow
PAUSE	PAUSE	STEP - FREEZE	Pause / Step / Freeze
STOP	STOP	HOLD	Stop / Hold
	<<	TUNE-	<< / Tune-
	>>	TUNE+	>> / Tune+
	I<<	PRESET-	I<< / Preset-
	>>I	PRESET+	>>I / Preset+
OPEN/CLOSE	OPEN / CLOSE	SURROUND	Eject / Surround
PROGRAM	PROGRAM	PROGRAM TV/RADIO	TV/Radio /
CHECK	CHECK	GOTO TEXT	Text / Goto
VOLUME UP	VOLUME UP		Up
	I<<		Left
INTRO	INTRO	OK	OK
	>>I		Right
CLEAR	CLEAR	CLEAR EXIT CANCEL	Exit / Cancel / Clear
VOLUME DOWN	VOLUME DOWN		Down

Originale		Sostituto	
VOLUME UP	VOLUME UP	+ VOL	Vol+
RIAA	RIAA	LIST SMART	Smart / List
	SKIP NEXT	+ CH PAGE	CH+ / Page+
VOLUME DOWN	VOLUME DOWN	VOL −	Vol-
DISPLAY	DISPLAY	MEDIA DISPLAY	Display / Media
	SKIP PREV.	CH PAGE −	CH- / Page-
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
+10	+10	-/-- GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - SAT 0	0

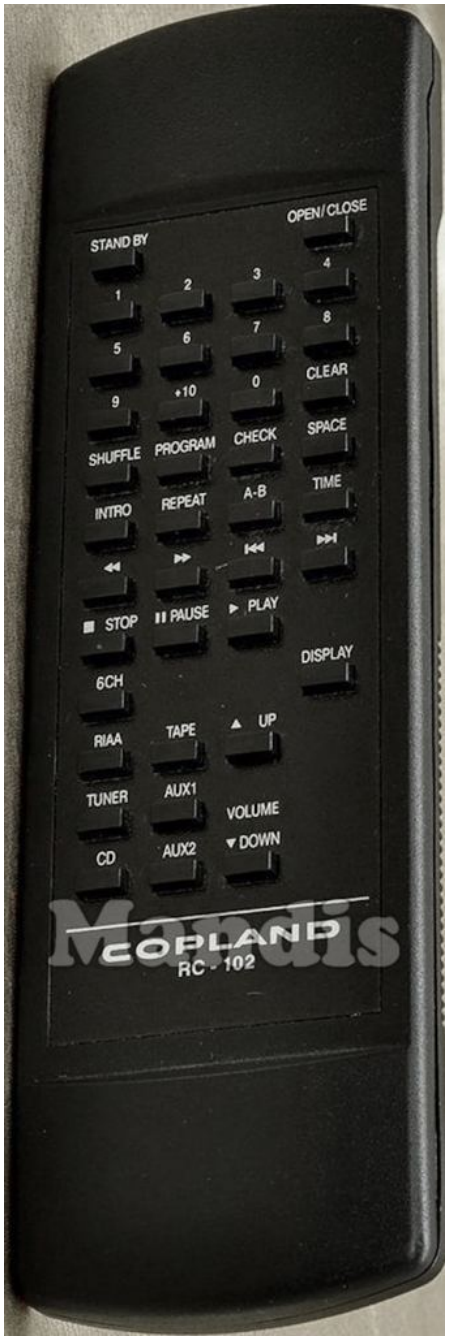

Originale		Sostituto	
AUX1	AUX 1	NETFLIX SEARCH	Red / Netflix / Search
AUX2	AUX 2	APP REPEAT	Green / APP / Repeat
6CH	6 CH	YouTube REPEAT A-B	Yellow / YouTube / Repeat
SHUFFLE	SHUFFLE	Prime Video RANDOM	Blue / Prime Video / Random
CD	CD	SHIFT + CD - STB 3	Shift + 3
TAPE	TAPE	SHIFT + TAPE 5	Shift + 5
TUNER	TUNER	SHIFT + TUNER 6	Shift + 6

Originale	Sostituto

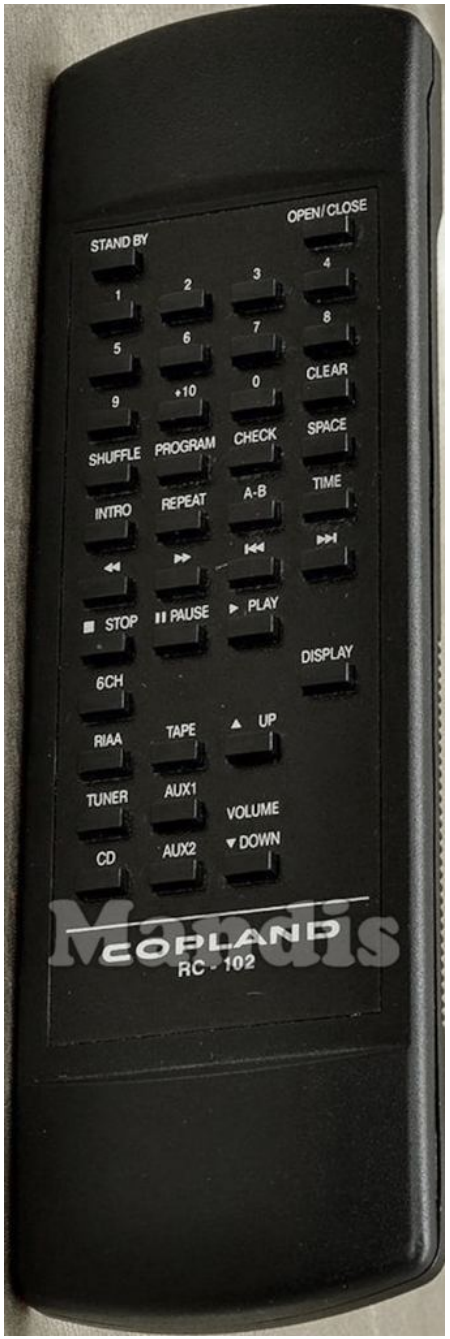

Originale	Sostituto	Originale	Sostituto
Stand By	Power	VOLUME UP	Vol+
PLAY	Play / Slow	RIAA	Smart / List
PAUSE	Pause / Step / Freeze	SKIP NEXT	CH+ / Page+
STOP	Stop / Hold	VOLUME DOWN	Vol-
<<	<< / Tune-	DISPLAY	Display / Media
>>	>> / Tune+	SKIP PREV.	CH- / Page-
I<<	I<< / Preset-	1	1
>>I	>>I / Preset+	2	2
OPEN / CLOSE	Eject / Surround	3	3
PROGRAM	TV/Radio /	4	4
CHECK	Text / Goto	5	5
VOLUME UP	Up	6	6
I<<	Left	7	7
INTRO	OK	8	8
>>I	Right	9	9
CLEAR	Exit / Cancel / Clear	+10	Guide / EPG / -/--
VOLUME DOWN	Down	0	0

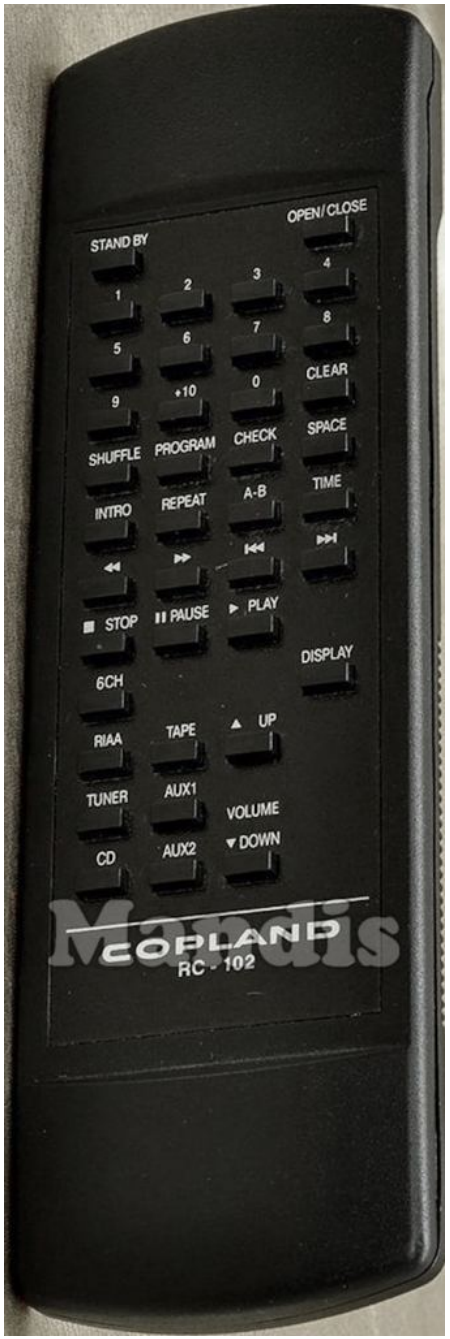

Originale	Sostituto	Originale	Sostituto
AUX 1	NETFLIX SEARCH — Red / Netflix / Search		
AUX 2	APP REPEAT — Green / APP / Repeat		
6 CH	YouTube REPEAT A-B — Yellow / YouTube / Repeat		
SHUFFLE	Prime Video RANDOM — Blue / Prime Video / Random		
CD	SHIFT + CD - STB 3 — Shift + 3		
TAPE	SHIFT + TAPE 5 — Shift + 5		
TUNER	SHIFT + TUNER 6 — Shift + 6		