Mandis shop

Sharp RRMCG0219AWSA

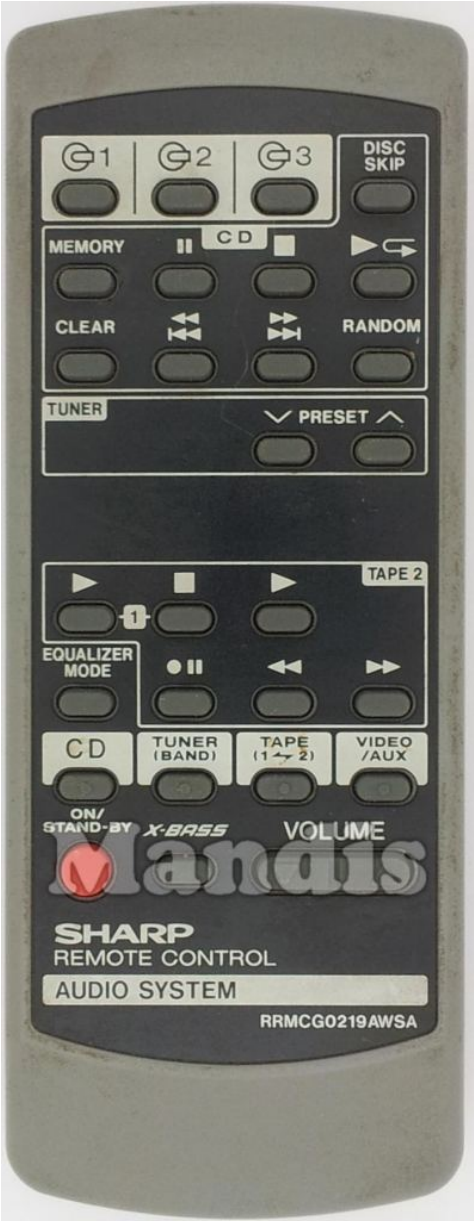

Originale	Sostituto
On/Standby	Power
Vol-	Vol -
Vol+	Vol +
CD	Red
Tuner/Band	Green
Tape (1-2)	Yellow
Video/AUX	Blue
Equalizer Mode	Dual
X-Bass	Subt
Play/Back CD	Play
Stop CD	Stop
Pause CD	Pause
<<|<< CD	|<<
>>|>> CD	>>|
Clear CD	Exit
Random CD	Media
Disc Skip CD	Smart

Originale	Sostituto
Preset Down	Ch -
Preset Up Tuner	Ch +
<< Tape2	<<
>> Tape2	>>
Play 1 Tape	Left
Stop 1 Tape	Ok
Play Tape2	Right
Rec/Pause	Down
Disc 1 CD	1
Disc 2 D	2
Disc 3 CD	3
Memory CD	Menu

https://tutti-i-telecomandi.it/it/Sharp/1039458-2478-telecomando-di-sostituzione-per-Sharp-RRMCG0219AWSA.html